
Product Guide

CONTENTS

ORIGINAL BUBBLE CHANDELIER



LAMPING

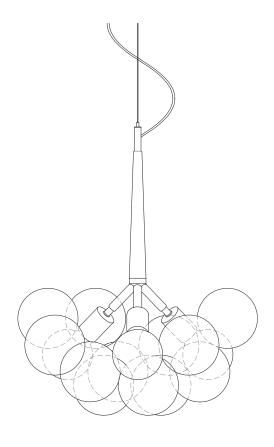


3 X G30 CLEAR INCANDESCENT BULBS 40W / 60W

INSTALLATION NOTE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

HARDWARE

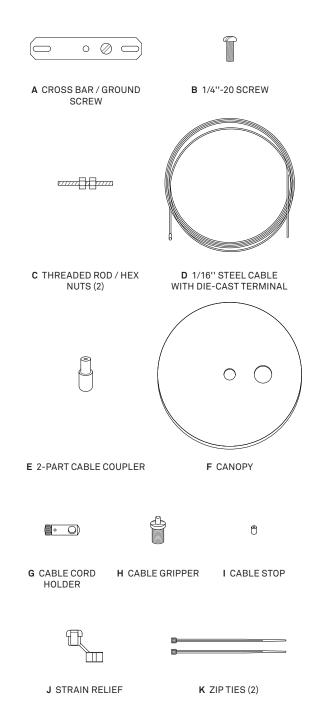

INSTALLATION

- 1 When handling fixture, hold at main stem. Leave bubble wrap pouches on glass globes and protective foam on fixture until installation is complete.
- 2 Attach cross bar (A) to junction box with 1/4"-20 screw (B) inserted through center hole. If it is necessary to make a longer connection, use threaded rod (C) and hex nuts.
- 3 Feed steel cable (D) through 2-part cable coupler (E) so that attached die-cast terminal sits inside coupler.
- 4 Place canopy (F) over junction box and secure by threading cable coupler on to 1/4''-20 screw.
- 5 Insert cable cord holder (G) on to steel cable and power cord. We recommend placing holder 12" above fixture or as desired. For low ceilings, holder may not be necessary.
- 6 Place cable gripper (H) at desired height along steel cable. Adjust height by depressing plunger.
- 7 Crimp copper cable stop (I) right below gripper to avoid accidental release of gripper. Cut off excess steel cable below stop.
- 8 Thread cable gripper into top cap of fixture.
- 9 Thread power cord through canopy and secure with strain relief bushing (J). Zip ties (K) are provided to aid in draping power cord if needed or desired. We like a subtle S-curve in cord for larger drop heights.
- 10 Release canopy by unthreading part 2 of cable coupler. Make necessary electrical connections in junction box. Connect white (neutral) and black (hot) leads accordingly. Once connections have been made and tested, raise canopy and thread part 2 in place.
- 11 Remove bubble wrap bags before turning on fixture to avoid melting of plastic. Bags are secured with staples. Remove carefully to avoid scratching fixture's surfaces. Begin with top layer of globes and work towards bottom layers. Avoid knocking glass globes into each other.
- 12 When removing bubble bags pay close attention to numbered stickers. Consult diagram at end of document for correct placement.
- 13 You are done. Enjoy!

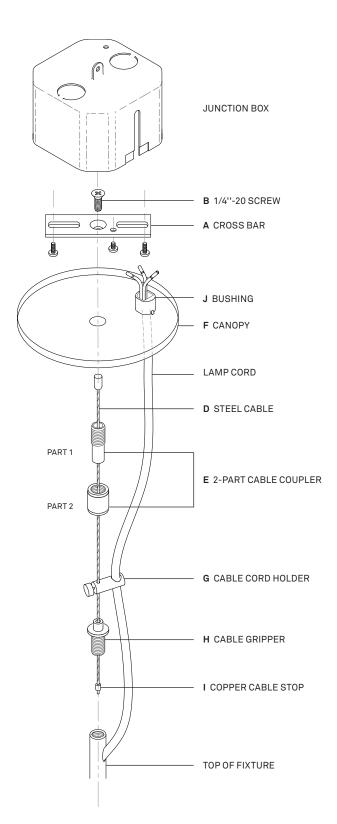


ARRANGEMENT

Use the diagram to ensure your bubble chandelier has been installed with the correct geometry.

Take care that no strings are crossed and that globes in each level are hanging evenly.

- 1 Lowest level
- 4 Highest level

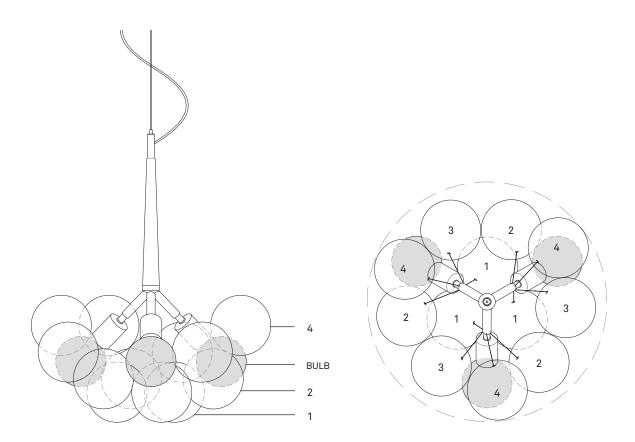

CHANDELIER CARE

ON CLEANING

Regular cleaning is essential to prevent dust from building up on the fixture. We recommend wearing the included cotton gloves when cleaning and handling the glass globes.

First, make sure that the chandelier is switched off and cool. For general everyday cleaning, use a soft antistatic dust brush or similar. While dusting keep in mind that the glass globes shouldn't knock against one another.

For cleaning stubborn layers of dust, use a gentle solvent free cleanser with paper towels or a micro fiber cloth. Wipe glass globes gently.

Avoid rotating your chandelier. When cleaning, work in sections and walk or move a ladder around your light fixture.

GENERAL NOTE

The suspension canopy systems should not be exposed to water or wind, or be allowed to oscillate continuously in any circumstance. Avoid placing fixtures close to HVAC vents or in chemical-laden environments such as indoor swimming pools.

REPLACEMENTS

Replacement light bulbs are available directly from our online shop. Glass globes can be obtained by emailing the studio.

WARRANTY

PELLE warrants its products to be free of defects in workmanship under normal use and service for a period of one year from date of purchase. PELLE reserves the right to inspect the damaged product before having any obligation under this limited warranty. All costs of shipping for inspection are the sole responsibility of the purchaser. PELLE, at it's option, shall repair or replace the defective unit covered by this warranty. PELLE is not responsible for damages caused by improper installation, maintenance or operation. Removing warning labels from the fixture or any other modification to the fixture not performed by manufacturer voids the warranty. Our warranty extends to products purchased only by the original purchaser.